



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Thermocouple Connections 1

Modified on Sunday, 01 February 2015 01:22 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Check It Out](#) » [RPM Meters](#) » **[Thermocouple Connections 1](#)**


Vol. 16 #2, Dec. 1989 - Thermocouple Connections 1

Tag or color code thermocouple connections and power connections at melt pipe and die so they are reconnected properly after maintenance or die changes. Controllers don't control very well when they do not get the correct error signal or send the correction to the wrong location.

See also:

- [Barrel zone override](#)
- [Control systems](#)
- [No service call](#)
- [Power factor](#)
- [Temperature controller calibration](#)
- [Thermocouple connections 2](#)
- [Thermocouple wires](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .