



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



## Pressure Transducers

Modified on Sunday, 01 February 2015 04:50 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Tidal Waves](#) » [Check New Screws](#) » [Pressure Transducers](#)

Pressure Transducers  
Vol. 17 #2, July 1990


Be sure to zero the transducer at operating temperatures since this will change with temperature due to thermal expansion.

Never handle, unscrew, or tighten a transducer with solidified polymer near the tip. You will tear the diaphragm.

See also:

- [Calibrate transducers](#)
- [Pressure blips](#)
- [Pressure transducer handling](#)
- [Pressure transducers 2](#)
- [Transducer accuracy](#)
- [Transducer removal](#)
- [Transducer calibration](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .