



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Heater Contact

Modified on Sunday, 01 February 2015 05:00 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

(10) » [Vent Insert Design](#) » [Screw Inspection](#) » [Heater Contact](#)


Heater Contact
Vol. 17 #3, Dec. 1990

After a cold shutdown for maintenance, be sure to check for good contact between the cast heaters and the barrel. Sometimes, during cooling or reheating, the heater can separate from the barrel. This causes local overheating of the aluminum heater, which may melt and fail.

See also:

- [Heat transfer](#)
- [Heater burnout](#)
- [Loose heaters](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .