



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Coextrusion Alarms

Modified on Sunday, 01 February 2015 05:08 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

(10) » [Feed Throat Cooling](#) » [Oak Persuaders](#) » **Coextrusion Alarms**


Coextrusion Alarms  
Vol. 17 #4, Mar. 1991

When running a coextrusion line, make provision to adequately alarm the operators if one of the extruder drives trips out. This will prevent extrudate from back flowing in the stopped machine and creating a blockage in the feed section.

See also:

- [Coextrusion](#)
- [Extruder drive](#)
- [Coextrusion control](#)
- [Melt blocking](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .