



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

  [»](#)

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration


- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Throat Cooling

Modified on Sunday, 01 February 2015 05:20 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Underwater Pelletizer](#) » [Bevel Outside](#) » **Throat Cooling**


Throat Cooling  
Vol. 18 #2, July 1991

Always control water flow in throat cooling systems from the outlet side to prevent flashing (steam) and to minimize air pockets.

See also:

- [Feed throat cooling](#)
- [Liquid in feed](#)
- [Water cooling](#)

[Return to Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .