



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Extruder Cooling

Modified on Sunday, 01 February 2015 05:50 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Feed Throat Configuration](#) » [Gearpump Changes](#) » **[Extruder Cooling](#)**

Extruder Cooling
Vol.20 #1, Mar., 1993


Have you checked your cooling lines on your extruder lately?

Corrosion can completely shut off your water supply, or can lead to plugged lines. Solenoid valves can also scale over and fail in either open or closed positions. Periodically check the flow.

See also:

- [Cooling water](#)
- [Cooling water flow](#)
- [Extruder throat cooling](#)
- [Extruders](#)
- [Water cooling](#)
- [Water piping](#)
- [Zone cooling check up](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .