



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

 >>

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



Die Heaters

Modified on Sunday, 01 February 2015 05:55 PM by [mpieler](#) Categorized as [Extrusion Hints](#)

[\(10\)](#) » [Temperature Control](#) » [Screen Packs 2](#) » [Die Heaters](#)

Die Heaters
Vol.20 #1, Mar., 1993

Re tighten heaters after the temperature has reached 200 degrees F. (Don't forget to turn off the power).

See also:

- [Poor stranding](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)