



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Level Switch Problems

Modified on Sunday, 01 February 2015 10:38 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Flex Tube Safety](#) » [Plant Layout](#) » [Level Switch Problems](#)

Level switch problems  
Vol.21 #2, Oct. 1994


The solidstate level switches used in resin handling equipment are sometimes affected by A/C variable frequency drives.

If this happens, try running a separate A/C power source to the sensors or adding noise filters on the power lines.

See also:

- [Extruder drive](#)
- [Vector drives](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .