



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  [»](#)

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Clean Out Dust and Flake

Modified on Sunday, 01 February 2015 10:53 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Screen Utilization](#) » [Lab Extruders](#) » [Clean Out Dust and Flake](#)

Clean out dust and flake
Vol. 22 #1, June 1995


Check regrind handling system when changing resin types.

Dust and flake is difficult to fully clean and can cause misleading results through contamination.

See also:

- [Changing resin types](#)
- [Feed throats](#)
- [Material clean out](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .