



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration


- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Vent Plugging

Modified on Sunday, 01 February 2015 10:58 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
(10) » [Lab Extruders](#) » [Clean Out Dust and Flake](#) » [Vent Plugging](#)

Vent Plugging
Vol. 22 #1, June 1995


During startup, the vacuum at any vent port should be increased very slowly.

Suddenly turning on the vacuum system can result in a surge of vapor flow that immediately causes entrainment and vent plugging.

See also:

- [How to stop a vacuum pump](#)
- [Vent bleed](#)
- [Vent flow](#)
- [Vent insert design](#)
- [Vent port fouling](#)
- [Vents 1](#)
- [Vents 2](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .