



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Heat Transfer

Modified on Sunday, 01 February 2015 11:03 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

(10) » [Bridge Breaker](#) » [Screw Removal 2](#) » **Heat Transfer**

Heat Transfer
Vol. 22 #2, Sept. 1995


Before start up, check to make sure the heaters are in direct contact with the barrel surface.

Air is a great insulator, and gaps between heater and barrel make the heater work that much harder and burn out that much sooner.

See also:

- [Barrel heaters](#)
- [Barrel zone override](#)
- [Gauge variation](#)
- [Heater contact](#)
- [Heat exchanger](#)
- [Start up 2](#)
- [Trouble shooting with barrel zones](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .