



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division Board of Directors



# Transducer Removal

Modified on Sunday, 01 February 2015 11:15 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Gearbox Oil Level](#) » [Transducer Accuracy](#) » **[Transducer Removal](#)**



Transducer Removal  
Vol. 22 #3, Dec. 1995

You are likely to ruin your electronic instrumentation if you try to remove it from a cold machine.

Wait until the extruder is fully heated before trying to unscrew transducers and thermocouples.

See also:

- [Pressure transducer handling](#)
- [Pressure transducers](#)
- [Thermocouple connections 1](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)