



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration

- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Screw Removal 3

Modified on Sunday, 01 February 2015 11:25 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Static Electricity Build Up](#) » [Reduce Static in Polymer Processing Operations](#) » **Screw Removal 3**



Screw Removal 3  
Vol. 23 #1, May 1996


Screw removal from an extruder must be done hot. Proper safety precautions need to be taken with operators/ mechanics wearing proper personal protection equipment: hot gloves, face shield, long sleeves, and safety shoes.

As screw(s) are removed, or shortly after, when still hot, wire brush remaining extrudate before it has a chance to cool when it would be more difficult to clean.

## See also:

- [Extruder screw won't push out](#)
- [Hand held pyrometer](#)
- [Protect your hand](#)
- [Screw removal 1](#)
- [Screw removal 2](#)
- [Screw removal 4](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .