



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki

  »

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# After Rebuild

Modified on Sunday, 01 February 2015 11:57 PM by [mpieler](#) Categorized as [Extrusion Hints](#)   
(10) » [Incoming Power](#) » [Loose Heaters](#) » **After Rebuild**

After rebuild  
Vol. 24 #1, March 1997


After a machine rebuild, always check each thermocouple for correct position, security in mounting, and rate of rise when power is applied to the respective zone.

- Mark Sewak, LCI Corp.

See also:

- [Seated TCs](#)
- [Thermocouple connections 1](#)
- [Thermocouple connections 2](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .