



## Navigation



## Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

## Search the Wiki


»

## Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

## Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

## Administration


- [Administration](#)
- [File Management](#)

## Brought to you by:

The SPE Extrusion Division  
Board of Directors



# Screw Removal 4

Modified on Sunday, 01 February 2015 11:58 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 

[\(10\)](#) » [Dissimilar Metals](#) » [Gels 3](#) » [Screw Removal 4](#)

Screw Removal 4  
Vol. 24 #1, March 1997


Upon shutting down an extruder, it is helpful to stop feeding product and then follow up with a purge material that will make it easier to pull the screw for changeover or maintenance.

- Bill Corcoran, Dupont Company

See also:

- [Easy screw disassembly](#)
- [Extruder screw won't push out](#)
- [Oak persuaders](#)
- [Screw removal 1](#)
- [Screw removal 2](#)
- [Screw removal 3](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .