



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki

  »

Viewing /Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Verify Drawings

Modified on Monday, 02 February 2015 01:03 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
[\(10\)](#) » [Flow Instability](#) » [Consistent Air](#) » **[Verify Drawings](#)**

Verify Drawings
Vol. 26 #2, September 1999

When installing new equipment, always assume that the drawings are wrong – both for the equipment and the plant. With the OEM – verify – in the plant go measure things yourself. Not only will you gain peace of mind, you will avoid the unpleasant surprises of incomplete or incorrect drawings, or an orientation that wasn’t exactly the way you thought it was.

- Bill Davis, Poly-America

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .