



## Navigation



### Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

### Search the Wiki

 »

### Viewing/Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

### Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

### Administration

- [Administration](#)
- [File Management](#)

### Brought to you by:

The SPE Extrusion Division Board of Directors



# Clean Breakers

Modified on Monday, 02 February 2015 01:04 PM by [mpieler](#) Categorized as [Extrusion Hints](#) (10) » [Consistent Air](#) » [Verify Drawings](#) » [Clean Breakers](#)



Clean Breakers  
Vol. 26 #3, December 1999

When using an hydraulic slide plate screen changer. be sure to thoroughly clean the standby breaker plate and screen cavity, to prevent introduction of degraded material into the melt flow at screen change.

- Dan Smith LCI Corp.

See also:

- [Breaker plate maintenance](#)
- [Breaker plates](#)
- [Breaker plate recess ring](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#)