



Navigation



Extrusion 1-0-Wiki Pages

- [Main Page](#)
- [Best Papers](#)
- [Book Reviews](#)
- [Consultants Corner](#)
- [Extruder Software](#)
- [Extrusion Hints](#)
- [Safety](#)
- [Shop Tools](#)
- [Sponsors](#)
- [Technical Articles](#)

Search the Wiki



Viewing /Creating

- [Random Page](#)
- [Create a new Page](#)
- [All Pages](#)
- [Categories](#)

Account Management

- [Login/Logout](#)
- [Language Selection](#)
- [Your Profile](#)
- [Create Account](#)

Administration

- [Administration](#)
- [File Management](#)

Brought to you by:

The SPE Extrusion Division
Board of Directors



Extruder Screw Won't Push Out

Modified on Monday, 02 February 2015 01:16 PM by [mpieler](#) Categorized as [Extrusion Hints](#) 
[\(10\)](#) » [Twin Screw Extruder](#) » [Improve Melt Quality](#) » **[Extruder Screw Won't Push Out](#)**

Extruder Screw Won't Push Out
Vol. 27 #2, November 2000

When an extruder screw won't push out due to an interference (foreign object) in the barrel, reverse the direction of the extruder motor/screw rotation. This will normally break the screw loose and allow the pusher to push it out.

- Bill Davis Poly-America

See also:

- [Screw removal 1](#)
- [Screw removal 2](#)
- [Screw removal 3](#)
- [Screw removal 4](#)
- [Oak persuaders](#)

Return to [Extrusion Hints](#)

Some of the icons were created by [FamFamFam](#) .